


Quick guide — — Overview buttons and guidance screen

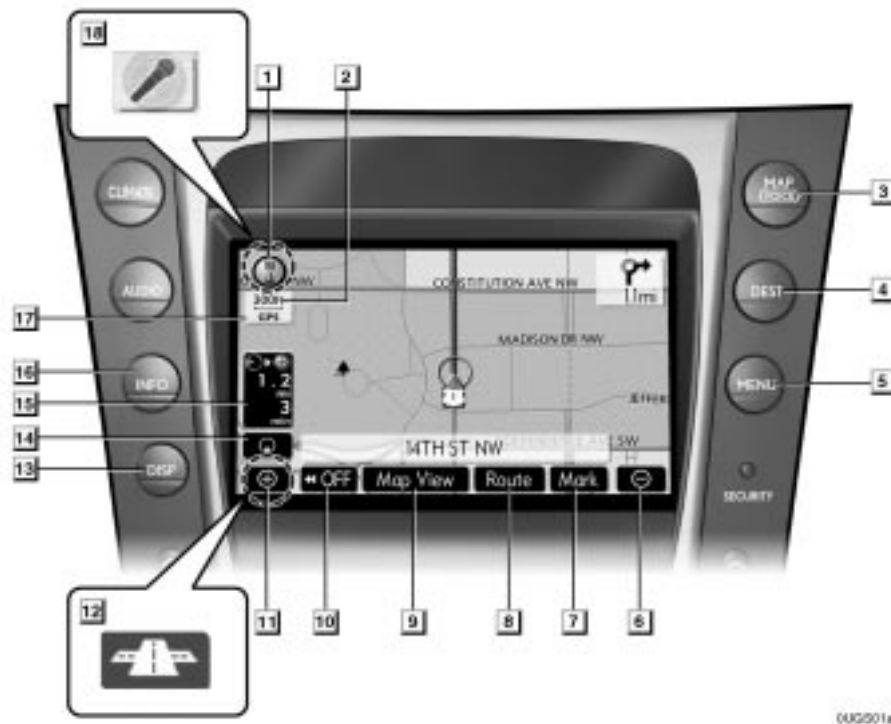

| No. | Name | Function | Page |
|-----|--------------------------------------|---|------------------------------------|
| 1 | North-up or heading-up symbol | This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation. | 35 |
| 2 | Scale indicator | This figure indicates the map scale. | 33 |
| 3 | “MAP/VOICE” button | Push this button to repeat a voice guidance, cancel one touch scroll, start guidance, and display the current position. | 26, 68 |
| 4 | “DEST” button | Push this button to display the “Destination” screen. | 11, 12, 38, 39 |
| 5 | “MENU” button | Push this button to display the “Menu” screen. | 7, 9, 84, 86, 87, 88, 91, 104, 149 |

2008 GS460/350/450h_Navi from Sep. '07 Prod. (OM30875U)

| No. | Name | Function | Page |
|-----------|---|--|------------------------|
| 6 | Zoom out touch-screen button | Touch this button to reduce the map scale. | 33 |
| 7 | “Mark” | Touch this button to register the current position or the cursor position as a memory point. | 28 |
| 8 | “Route” | Touch this button to change the route. | 70, 72 |
| 9 | “Map View” | Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route. | 76, 78, 79, 80 |
| 10 | “◀◀OFF” | Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching “ON▶▶”. | 107 |
| 11 | Zoom in touch-screen button | Touch this button to magnify the map scale. | 33 |
| 12 | Foot print map touch-screen button | Touch this button to display the foot print map and the building information. | 34 |
| 13 | “DISP” button | Push this button to display the “Display” screen. | 130 |
| 14 | Screen configuration touch-screen button | Touch this button to change the screen mode. | 31 |
| 15 | Distance and time to destination | Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination. | 69 |
| 16 | “INFO” button | Push this button to display the “Information” screen. | 20, 116, 120, 131, 134 |
| 17 | “GPS” mark (Global Positioning System) | Whenever the vehicle is receiving signals from the GPS, this mark is displayed. | 138 |
| 18 | Speech command system indicator | The microphone is shown by pushing the speech command switch. The speech command system can be operated while this indicator is shown. | 125 |


— Registering home



1 Push the “DEST” button.




2 Touch .

If home has not been registered, you can register it by touching .



3 There are 11 different methods to search your home.


See “Destination search” on page 39.

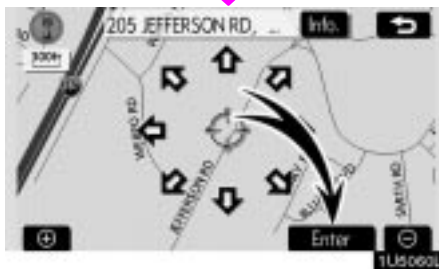

4 Touch “Enter”.

The “Memory Point” screen is displayed.

2008 GS460/350/450h_Navi from Sep. '07 Prod. (OM30875U)

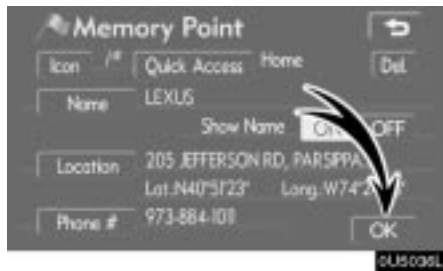

5 Touch "OK".

Registration of home is complete.

You can also register home by touching the **"MENU"** button. (See "— Registering home" on page 98.)

You can change the icon, quick access, name, location and phone number. (See "— Editing memory points" on page 93.)

— Registering preset memory point (Quick access)



1 Push the “DEST” button.



2 Touch one of the quick access buttons.

You can set a memory point to one of the quick access buttons which has not been set.




3 There are 12 different methods to search a preset memory point.

See “Destination search” on page 39.



4 Touch “Enter”.

The “Memory Point” screen is displayed.

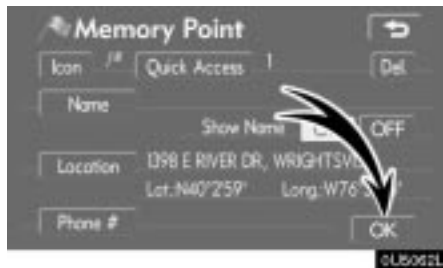

5 Touch "OK".

Registration of the preset memory point is complete.

You can also register preset destinations by touching the **"MENU"** button. (See "— Registering memory points" on page 92.)

You can change the icon, quick access, name, location and phone number. (See "— Editing memory points" on page 93.)

The registered points can be used on the "Destination" screen. (See "— Destination search by Quick access" on page 42.)

— Operation flow: guiding the route



1 Push "DEST" button.



2 There are 13 different methods to search destinations.

See "Destination search" on page 39.



3 Touch "Enter".

The navigation system performs a search for the route.



4 Touch "Guide", and start driving.

Routes other than the one recommended can also be selected. (See "Starting route guidance" on page 59.)

5 Guidance to the destination is given via voice and on the guidance screen.


— Setting home as the destination



1 Push "DEST" button.



2 Touch .

The  can be used if your home has been registered. (To register "Home", see "— Registering home" on page 98.)



3 Touch "Enter".

The navigation system performs a search for the route.



4 Touch "Guide", and start driving.

Routes other than the one recommended can also be selected. (See "Starting route guidance" on page 59.)

5 Guidance to the destination is given via voice and on the guidance screen.